

INSTALLATION INSTRUCTIONS MANUAL

MOUNTING LOCATION

Carefully select a suitable mounting location for the tweeters. Be sure to check behind the mounting location for adequate space for tweeter depth.


INSTALLATION

Screw the angle mounting to the location selected or use the double sided tape provided to stick the flush mounting to the location selected.


WIRING

Feed the wires from the tweeter through the flush / angle mounting opening and connect these wires to the line wires coming from the included outboard crossover tweeter terminals. Push the tweeter into the flush / angle mounting until the tweeter sits nicely into the mounting.

INSTALLATION PROCEDURE :

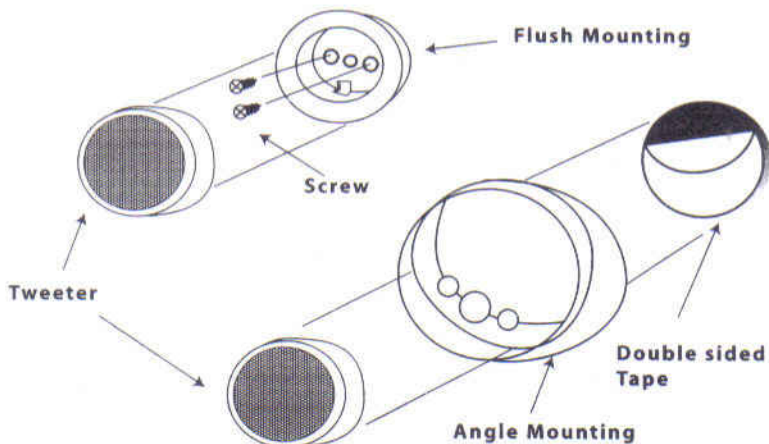

WIRING DIAGRAM :

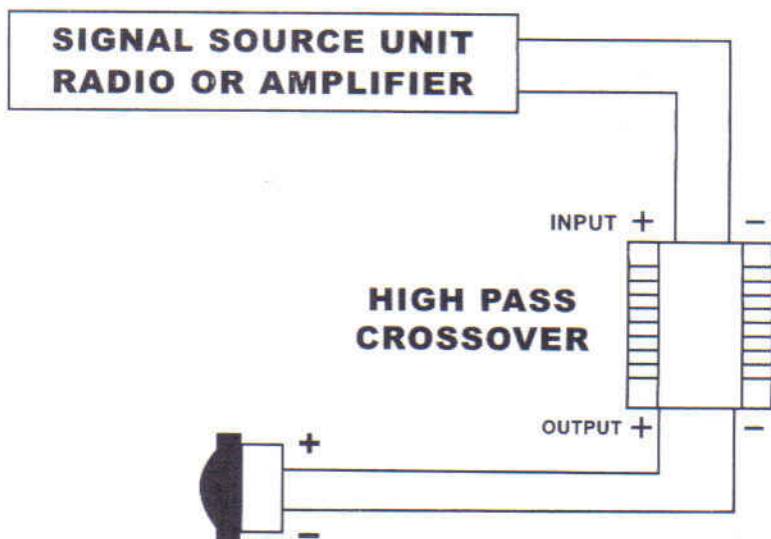

SPECIFICATIONS :

MODEL : IF-T20

28mm Silk Dome Tweeter System with High-Pass Crossover Network

Peak Power Handling	: 220 Watts Max.
Continuous Power Handling(RMS)	: 110 Watts
Impedance	: 4 Ohm
Magnet Structure	: Neodymium
Sensitivity	: 90 ± 3dB at 1M/1W
Frequency Response	: 2kHz - 22kHz
Diaphragm	: Silk Dome
Voice Coil Dia.	: 28mm Hi-Temp ASV